







## BEFORE Installation do the following:

-  Disable any antivirus software
-  Uninstall any version of VirtualBox, then reboot.
-  Close all applications and utilities
-  Ensure you have at least the minimum software and hardware requirements
-  If AppGuard is installed, lower the Protection Level to Allow Installs

 Do not re-install VirtualBox





## SW Requirements

- \* Microsoft Windows 10 - Pack 0 and above (32 and 64 bit)
- \* Microsoft Windows 8.1 - Pack 0 and above (32 and 64 bit)
- \* Microsoft Windows 8 - Pack 0 and above (32 and 64 bit)
- \* Microsoft Windows 7 - Pack 0 and above (32 and 64 bit)

## HW Requirements


- \* Recommended Multi-processor
  - Core 2 Duo ≥ 1.8 GHz
  - Minimum: Pentium 4 w/hyper-threading enabled ≥ 2.4 GHz
- \* 1 GB of available RAM
- \* 200 MB free hard drive space

- 1 Launch LinkGuardClientSetup.exe and follow the prompts including reboot. Once LinkGuard Client is installed, the LinkGuard icon appears in the system tray. The Connection Status information box displays, showing LinkGuard is Ready to connect.

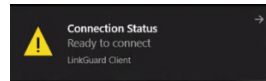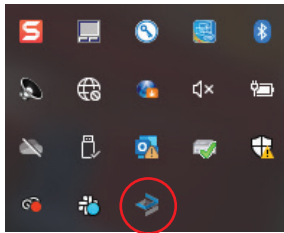


- 2 Hover over the LinkGuard Client logo, in the system tray, for status. Confirm that it is Ready to connect.

- 3 Insert the token, you received from your System Administrator, into a USB port on your computer. If your token requires a PIN, the PIN dialog box displays.

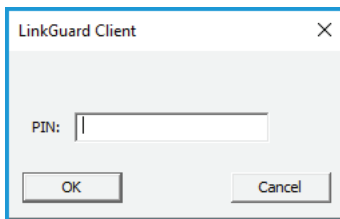

- a. Enter the PIN you received from your System Administrator.
- b. Click **OK**.

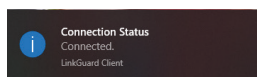


Once the tunnel is established, the status changes to Connected.



### Status - Token

LED Characteristics	Descriptions
On	Indicates the USB driver has recognized the token
Continual Blink-Blink-Off	Indicates Client is reading the token and connecting
Continual Blink-Off	Indicates Client connected
Off	Indicates the USB driver is not functioning
Continual Blink-Blink-Blink-Off	Indicates Client is resetting

### Status - LinkGuard Client Logo

Characteristics	Descriptions
	Indicates not connected
	Client is connecting
	The bars in the logo continually flash showing connectivity

